

Olivéri

Aug 2023 / Version1

# Holdfast Vertical Lock Grab Rail

### HF814

Please install the Grab Rail according to this guide.

#### **IMPORTANT**

Prior to installation, test fit the Grab Rail in both vertical and horizontal positions to ensure it does not obstruct doors, surfaces, fixtures or switches. Ensure the wall fixing screws are anchored into masonry or timber. Do not install them directly into plasterboard. After installation, test the Grab Rail to confirm stability and correct operation.

**WARRANTY** This Grab Rail is warranted to be free from manufacturing defects for a period of 15 years replacement parts and 1 year labour.

Subject to the terms contained in the full warranty information available at https://oliveri.com.au/service-and-warranty, where a genuine manufacturing defect arises within the warranty period Oliveri will, at its election, repair the defect or replace the product.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

#### SERVICE


If the product requires servicing, please contact your installer. If the installer is satisfied that the problem is not due to poor installation, contact Oliveri's nominated Warranty Service Agent for assistance on:

Ph: 08 8348 6444 (choose the after sales service and warranty option)

Email: warranty@oliveri.com.au


For full warranty information visit: https://oliveri.com.au/service-and-warranty

If a warranty service call finds that the product does not have a genuine manufacturing fault, our Warranty Service Agent reserves the right to pass on any call-out fee to the householder.

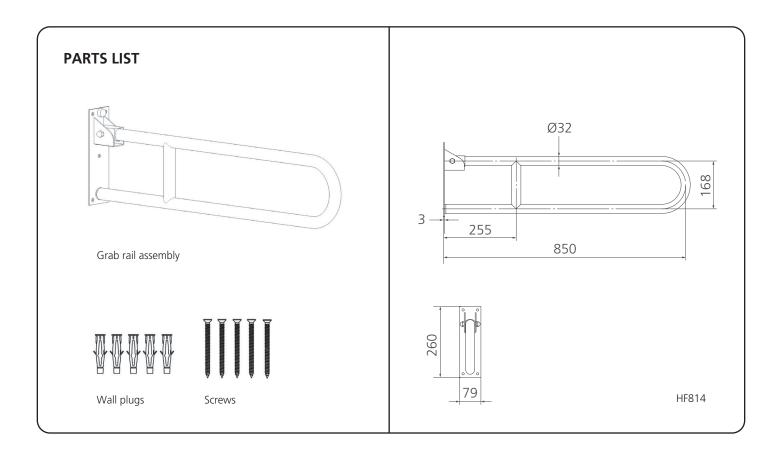


## **Installation Steps**


Preparation Tools: Drill driver, 10 mm drill bit, hammer and pencil.

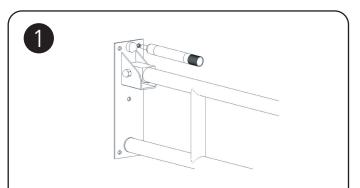


Position the grab rail on the wall in the required location making sure the base plate is square and level. Mark the fixing hole positions.

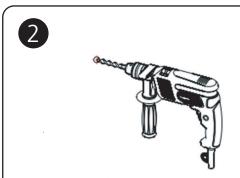


Drill 10 mm  $\emptyset$  holes to a depth of 80 mm at each marked screw location point. **NOTE** Use an appropriate drill bit for the wall material.

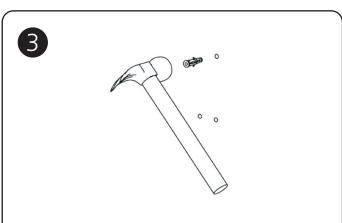

Hammer a wall plug into each base plate fixing hole that has been drilled.

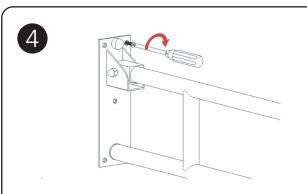

Begin fixing screws into the wall plugs and tighten fully to secure grab rail to the wall.

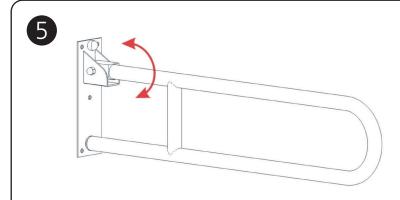

After securing grab rail to the wall, test grab rail operation by rotating the rail from horizontal to vertical positions.

