

Installation Instructions

Aug 2023 / Version1

Holdfast Inverted T Shower Rails

HF871-LH / HF871-RH

Please install the Grab Rail according to this guide.

IMPORTANT

Prior to installation, test fit the Grab Rail to ensure it does not obstruct doors, surfaces, fixtures or switches. Ensure the wall fixing screws are anchored into masonry or timber. Do not install them directly into plasterboard. After installation, test the Grab Rail to confirm stability and correct operation.

Do not install outdoors, near chlorinated pools or in salt water environments.

WARRANTY This Grab Rail is warranted to be free from manufacturing defects for a period of 15 years replacement parts and 1 year labour.

Subject to the terms contained in the full warranty information available at https://oliveri.com.au/service-and-warranty, where a genuine manufacturing defect arises within the warranty period Oliveri will, at its election, repair the defect or replace the product.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

SERVICE


If the product requires servicing, please contact your installer. If the installer is satisfied that the problem is not due to poor installation, contact Oliveri's nominated Warranty Service Agent for assistance on:

Ph: 08 8348 6444 (choose the after sales service and warranty option)

Email: warranty@oliveri.com.au

For full warranty information visit: https://oliveri.com.au/service-and-warranty


If a warranty service call finds that the product does not have a genuine manufacturing fault, our Warranty Service Agent reserves the right to pass on any call-out fee to the householder.

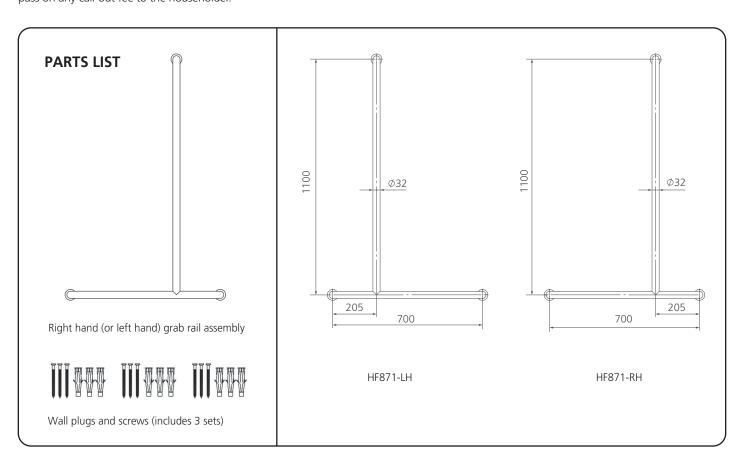


IMPORTANT: Never use abrasive or harsh chemical cleaners. Wipe with warm soapy water to maintain surface finish.

Installation Steps


Preparation Tools: Drill driver, 8 mm drill bit, hammer, pencil and level.

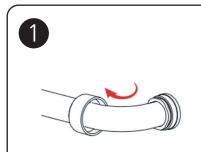


Unscrew all end covers from their base plates and carefully slide them along the rail away from the fixing plates.

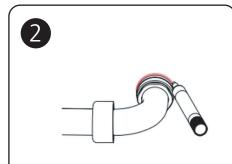

Position the grab rail on the wall in the required location. Check the rail is level and draw around each base plate.

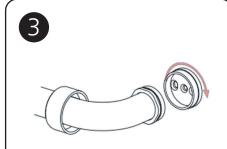

Unscrew the base plates from the fixing nuts and set aside the grab rail.

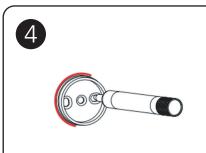


Put the base plates back in position according to the wall outlines. Mark each fixing screw hole location.




Drill 8 mm Ø holes to a depth of 70 mm at each marked screw location point.


NOTE Use an appropriate drill bit for the wall material.

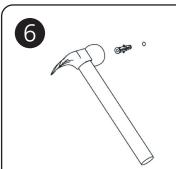


Hammer a wall plug into each base plate fixing hole that has been drilled.

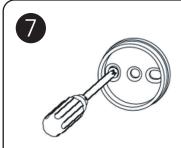

Tighten the screws, making sure the base plates are firmly secure and cannot move. Seal screw fasteners using a neutral-cure silicone sealant.

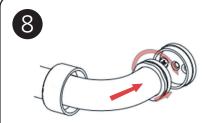

Locate grab rail onto the base plates and gradually begin to screw down the fixing nuts. **NOTE** Incrementally tighten nuts, alternating between each base plate until fully secure.

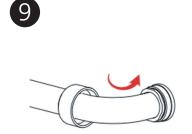

Carefully slide end covers back along the rail to each base plate and screw down securely.