

SPECIAL INSTRUCTIONS FOR PARTICULAR TOP MOUNT SINK MODELS

CAUTION

Leave protective tape on the sink when inverting over a benchtop and tracing its shape. The stainless steel will scratch if the sink slides across a hard surface.

Topmount sinks may also be known as “drop in” or “inset” sinks.

Topmount models with prefix SG

These sinks require a minimum 720mm bench top depth.


Templates are available for download from www.oliverisinks.com
Download DWG, DXF. or PDF template from www.oliverisinks.com.

Many Oliveri sinks have waste outlets positioned to the rear of the bowls. Ensure the sink is correctly positioned when fitting.

INSTALLER - PLEASE READ & FOLLOW THESE INSTALLATION INSTRUCTIONS

FOR OLIVERI VETRO SINKS (SG071 / SG072)

Please retain for consumer as care instructions are included

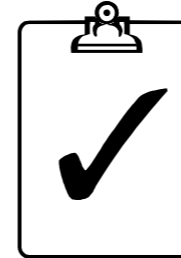

CHECK MODEL

The model number on the sink packaging must match the model of sink the customer ordered.
Do not install if incorrect.



CHECK THE CONDITION

Inspect the sink for any visible defects. **Do not install the sink if defects are found.** Contact your sink retailer / point of purchase.



AVOID CUTS

Handle the sink carefully to avoid personal injury.




AVOID SCRATCHES

Stainless steel can be scratched if proper care is not taken during installation.

IT IS HIGHLY RECOMMENDED THE ACTUAL SINK BE PRESENT AT TIME OF CUTTING

MATERIALS FOR FITTING THE UNDERMOUNT SINK:

- **Oliveri sink** (with correct tap holes as ordered) - includes mounting clips, sealing gasket, basket wastes and other accessories (depending on model).
- **These Installation Instructions**
- **Level** to check counter/benchtop & sink is installed level
- **Flat head screwdriver** (large - to tighten basket wastes)
- **Suitable sealant** (neutral-cure silicone sealant or equivalent)
- **Masking material** to protect counter/benchtop and sink from excess sealant

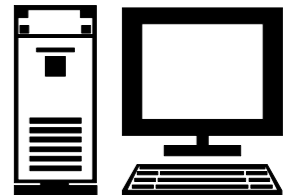

Download cutout template files (PDF, DWG & DXF) from our website.

AUSTRALIA
Head Office &
Manufacturing Plant
Tasman Sinkware Pty Ltd
Regency Park SA

Phone: +61 8 8348 6444
Fax: +61 8 8348 6495
Email: sinkware@tasbuildpro.com.au

www.oliverisinks.com

NORTH AMERICA

Sales Office
Tasman Sinkware North America
Corona CA
Email: northamerica@oliverisinks.com

UNITED KINGDOM DISTRIBUTOR

A.C. Toon Ltd
Phone: 01246 223900
Email: sales@actoon.co.uk

ASIA PACIFIC DISTRIBUTORS

New Zealand - Dux Industries Ltd
Phone: 0800 367 389

Singapore - Sim Siang Choon
Phone: 6266 6632


Hong Kong - Deacon & Co Ltd
Phone: 2369 6111

Any advice, recommendation, information, assistance or service provided by Tasman Sinkware in relation to goods manufactured by it or their use and installation, is given in good faith and is believed by Tasman Sinkware to be appropriate and reliable. However, any advice, recommendation, information, assistance or service is provided by Tasman Sinkware without responsibility or liability.

A member of the Fletcher Building Group.


FOLLOW THESE STEPS TO INSTALL THE OLIVERI VETRO SINK

IF COUNTER / BENCHTOP IS SUPPLIED WITH CUT-OUT, SKIP STEPS MARKED WITH*

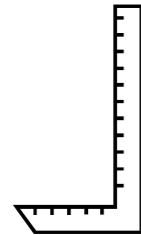


CHECK SPACE & LEVEL

Use a level to check the counter/benchtop – if not level, have rectified. Ensure there is adequate space for tapware (including a splash back if specified). Check space for installation (underneath) and operation (above). Particular care must be taken when a thick splash back is used (it may interfere with tapware location and operation). Ensure the cabinet will not foul the sink mounting flange or basins.

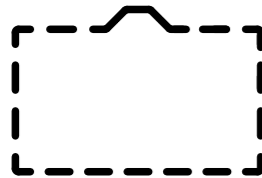


TEMPLATE *

Cut out templates for your Oliveri sink are available online at oliverisinks.com. Use the product model number to find the template. Some sink templates apply to both left-hand and right-hand models sinks. **Ensure template is correct way around for your model.**

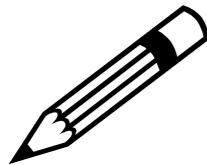

MARK CUT OUT *

Carefully mark out the template (or follow drawing instructions). Once the hole is marked out, use the template to conduct a final check before cutting.

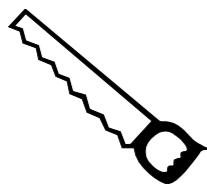


CUT & FINISH HOLE *

Re-check the position and cut out shape you have traced before cutting. Ensure there are no obstacles below that might interfere with cutting. Drill pilot holes to accept an appropriate cutting tool for the counter/benchtop material (wear suitable personal protection equipment). Cut just inside the template mark (or 10mm inside the sink tracing).




TRIAL FIT THE SINK

Carefully position the sink into the cut-out to make sure it fits correctly. If the fit is not correct, remove the sink and proceed with remedial work. Perform another trial fit after corrections have been made.

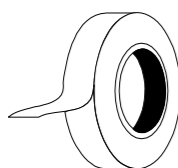


MASKING

Masking is necessary to prevent sealant overrun. It is recommended that the edge of the sink and the edge of the cutout are both covered with a suitable masking tape. This tape should be removed within 2 days of application.

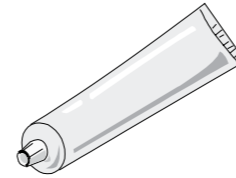

ADDITIONAL SEALANT

Apply additional sealant / caulking compound around the join where the counter/benchtop and the stainless steel sink meet. Check that the caulking product is mildew resistant and is suitable for use on the counter/benchtop material and also is suitable for use on stainless steel. Clean away any excess before it dries.

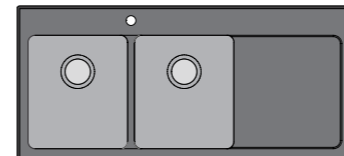

FITTING THE SINK

If you choose to mount the tap / faucet onto the sink prior to fitting, take extra care as it will change the weight and balance of the sink. Position and align the sink correctly in the cutout and lower it onto the counter/benchtop. **DO NOT USE SINK CLIPS TO MOUNT SINK TO BENCH TOP.** Use a bead of silicone around the cutout hole and around the edge of the sink to attach sink and seal against water ingress. Use the location tabs around the sink to locate the sink in the cut out hole. Use additional weight (5kg Max) applied to the top surface in any areas where the sink top is not sitting flush on the bench top. Do not use clamps on glass top sinks.



PLUMBING & TAPWARE

IMPORTANT - Connections to plumbing should always be done by a licensed plumber. Fit supplied basket wastes to sink bowls. Install tapware according to manufacturer's instructions. Care should be taken when fitting wastes to the sink. Follow the instructions provided with the wastes.

INSTRUCTIONS CONTINUE OVER PAGE

It is essential that the installation is waterproof and carried out in accordance with these instructions. Tasman Sinkware will not be held responsible for any damage caused by leakage or faulty installation.

CARE INSTRUCTIONS FOR YOUR OLIVERI SINK

AVOID CONTACT WITH ROUGH OR DIRTY SURFACES



- Clean with soap & water (towel dry)
- Clean along the grain of the Stainless Steel
- Use a soft brush or sponge (old tooth brush)
- Wipe over with a glass cleaner (Windex is very good)
- Use a Liquid cleaner (Bon-Ami or Jiff)
- Use a granulated stainless steel cleaner on bowls (Essteele)



- NEVER use Steel wool
- Beware of harsh liquid cleaners
- Beware of grit within cloths and mineral deposits within water
- Do not allow prolonged exposure to acids from Fruit, Fruit juices, Salts, Spirits, Bleach, Tea-bags
- Avoid prolonged contact with ordinary steel which can rust Tin Cans, Steelwool
- Do not keep harsh (acids or chlorine) chemicals under sink / laundry tub
- Do not leave chlorine/chloride chemicals on stainless steel surface
- Do not leave liquid soaps & cleaners to dry on stainless steel
- Do not use bleaches (White King, Domestos, Clorox)